
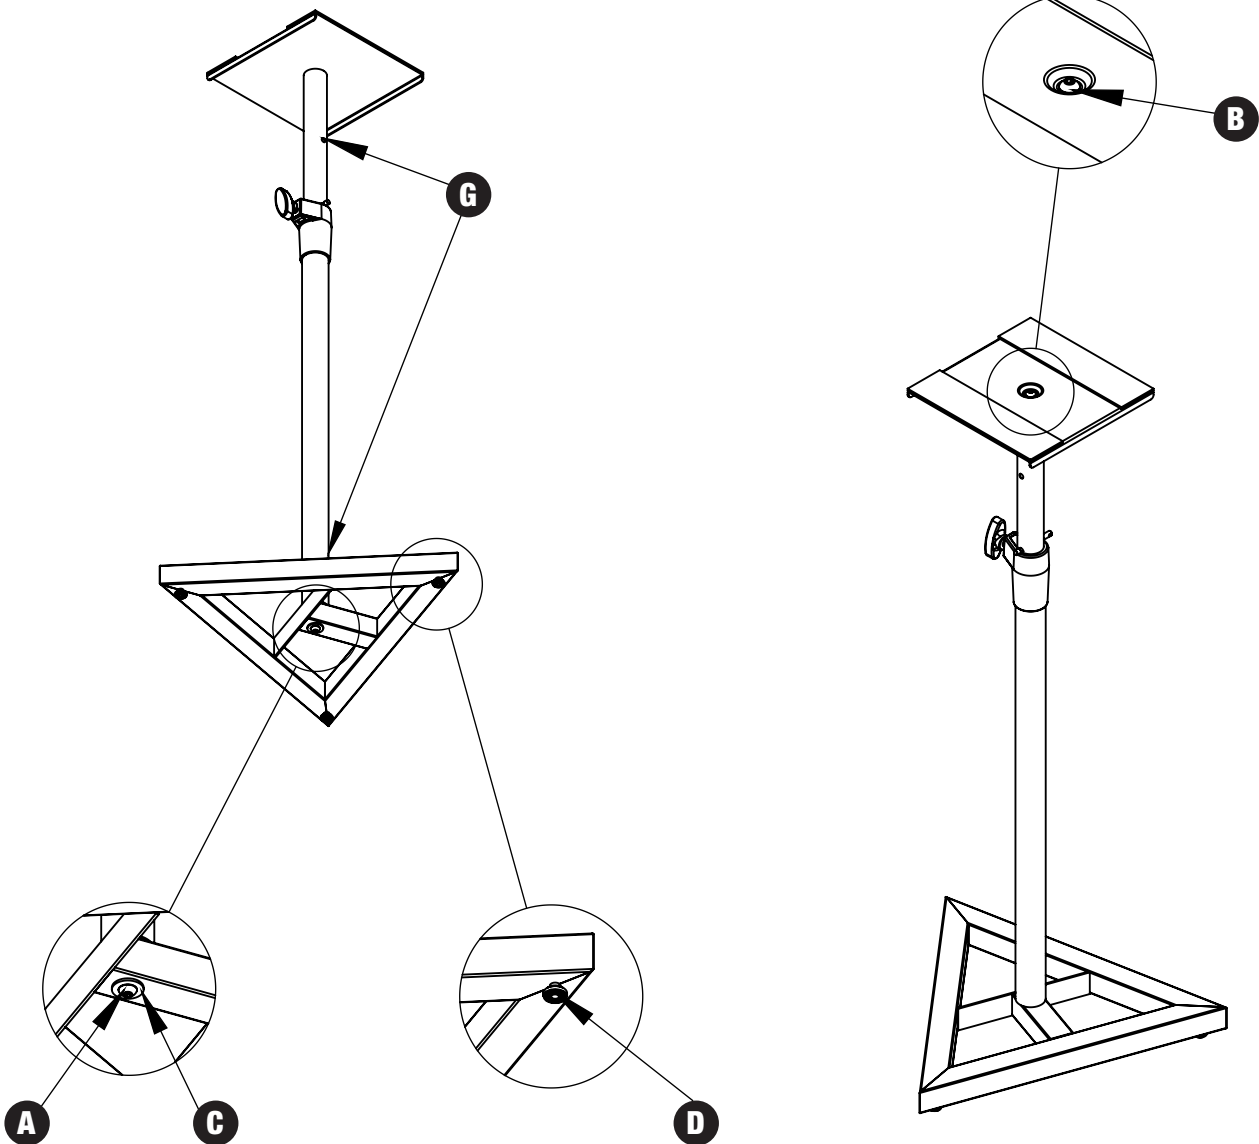
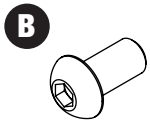
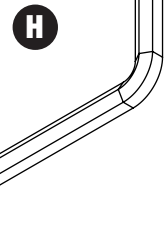
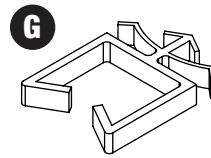




AUFBAUANLEITUNG
 ASSEMBLY INSTRUCTIONS | INSTRUCTION
SKDB039

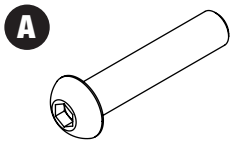

instead of plastic foot **D** metal pin **E** with nut **F** can be used